


HOODLUM INSTALLATION INSTRUCTIONS

1. Remove the deck lid.
2. Mount the deck lid stand offs.
3. Insert the small steel tab into the original hinge bracket. (The half moon notch should be in alignment with the original notch.)
4. Follow the diagram to locate the correct bolt holes in the *Hoodlum* for your car.
5. Mount the *Hoodlum* to the body around the original spring bracket and tighten the bolts. The side plates should sandwich the center plate and the original spring brackets. Note: On convertible Bugs, the *Hoodlum* center plate must be inserted into the original mount before the side plates and bolts are assembled.
6. Take the deck lid with the spring mounted. *Note: If the spring has been removed from the deck lid, reinstall it with the coil facing up and the locators in the first set of holes on the deck lid. Place the spring in the notch on the *Hoodlum* and using the leverage of the deck lid, push down to line up the bolt holes on the deck lid hinge. Install hinge bolts and align the deck lid.

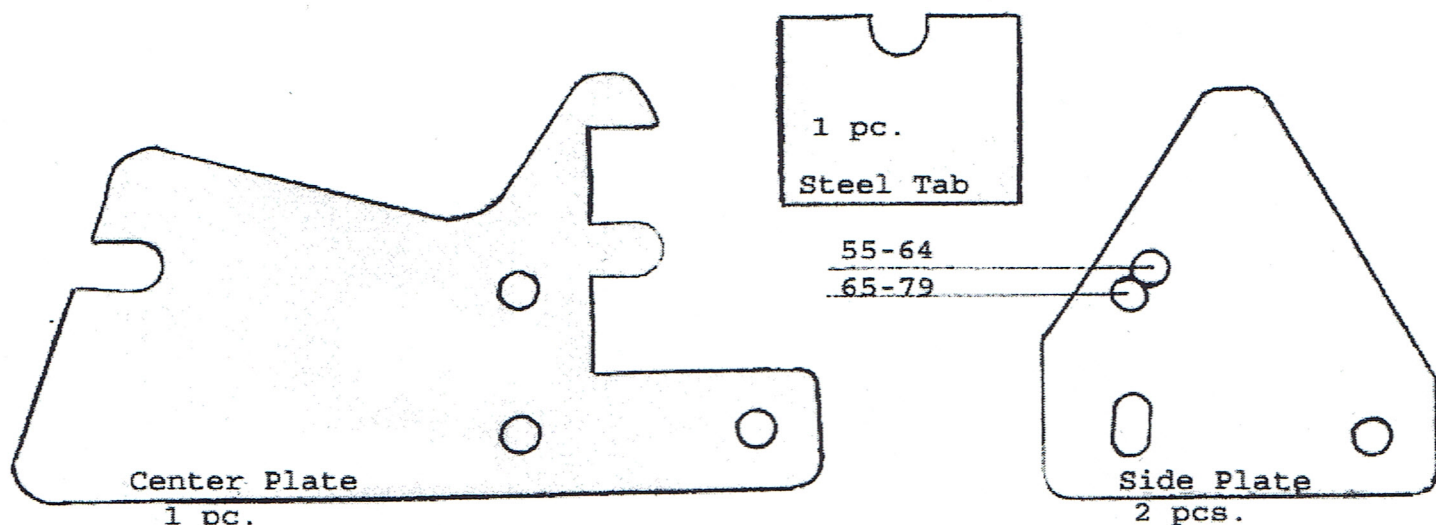

WOLFGANG INTERNATIONAL

Manufacturers of Custom &
Reproduction VW Products

1117 Parkview Ave.
Redding, CA 96001
(530) 246-GANG (4264)
Fax 244-7261

E-mail wolf@c-zone.net

www.wolfgangint.com